

## Flow Tamer for Fluval Canister Filters Installation Tips



**\* Installation is a snap and requires no tools**

**\* Follow these tips to make your install even easier**

- 1) Remove rubber hose coupler from output tube and submerge in hot water (this will make coupler pliable).
- 2) Next moisten Flow Tamer attachment nipple (PVC stub on attachment junction) and work coupler onto attachment nipple.
- 3) Tip the Flow Tamer attachment junction “upright leg” back approx. 30°, this is accomplished by slightly turning or rotating the 2 elbow fittings away from each other. Doing this will cause the spray bar when installed to be lying flat against the back glass of the tank.
- 4) Next install Flow Tamer attachment junction back onto the end of output hose, secure output hose back in manufacturers “hose saddle” as high as possible.
- 5) Now build the spray bar out away from the junction attachment and use the “keeper ring” of your choice or suction cups to secure the spray bar to the tank rim, all height adjustments should be made first at the “hose saddle” by removing “saddle clamp” and adjusting the output hose accordingly.

**\*\* All Flow Tamer Spray Bars are designed to function with only two spray bar legs assembled if adequate room is not available for a “3 leg” configuration or when using two spray bars in the same aquarium. \*\***

**Feel Free to call or text with any questions or concerns:**

**Walt Landru: 929-233-8490**