

# Flow Tamer Spray Bar

## Installation Instructions



**\*\*In its current factory configuration your spray bar will sit approx. ¼” below tank rim. However, a 6” piece of stock has been provided for you to customize your drop-down height as desired. \*\***

1. Remove manufacturer’s output attachment from output hose.
2. Place the flow tamer junction union on the rim of the tank and attach output hose using hose clamp provided.
3. Tip the upright leg of the junction union back until it hits rear glass of tank, the elbow at the top of the upright leg should be approx. ¼” from the bottom of the tank rim.
4. Now build your spray bar outward from the junction union and secure in position with either keeper rings or suction cups (If using suction cups, upright junction leg cannot be tipped all the way back for bar to touch glass.)
5. All junction union joints rotate and allow the junction union to be manipulated for a snug and “perfect fit”. Upright junction union leg should be tilted back approx. 30° in order to touch glass and provide snug installation. Only one keeper ring should be necessary to hold spray bar securely in position.

**\*\* All Flow tamer Spray bars are designed to function with only two spray bar legs assembled if adequate room is not available for a “3 leg” configuration or when using two spray bars in the same aquarium**

**\*\*Thank You for your purchase and feel free to call or text with any questions or concerns\*\***

**Walt Landru : 929-233-8490**